


## Introduction and Background

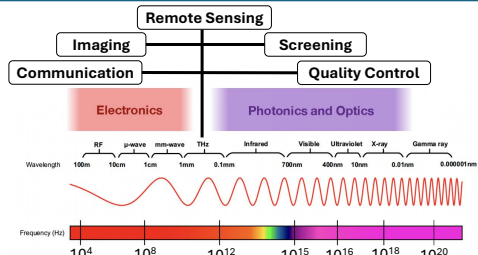

- Terahertz (THz) technology enables non-contact vital sign monitoring
- THz offers superior resolution & penetration through opaque materials compared to conventional methods
- Silicon THz is far cheaper & consumes less power because of extremely mature silicon technology
- **Objective:** Demonstrate the viability of the silicon THz technology for biomedical applications

## Materials & Methods

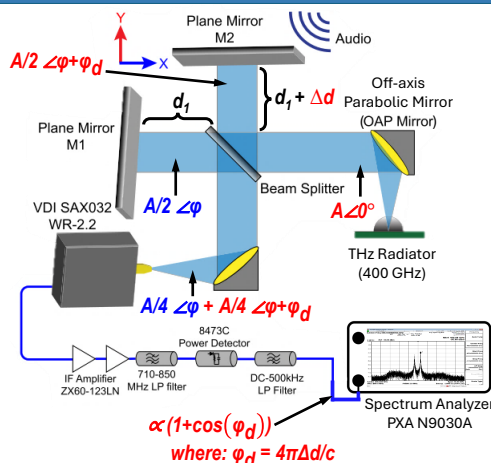


Fig. 1: Diagram of interferometry setup. THz signal is reflected off two plane mirrors and recombined to create the interference pattern, then filtered before being analyzed on the spectrum analyzer [1].


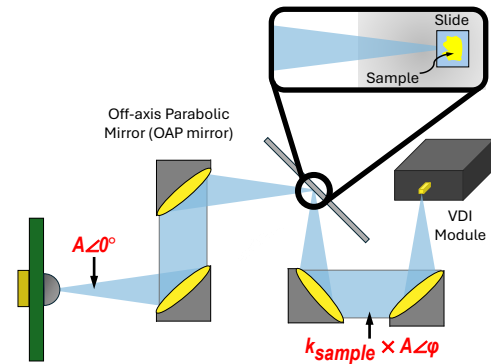


Fig. 2: Diagram of setup for biosample identification (reflectometry). A focused beam, operating at multiple frequencies around 400 GHz, illuminates the aqueous sample held within a stack of five slides. The reflected power is measured by the VDI module.

## Vibration/Heartbeat Sensing (Vibrometry)

### Power & Voltage Sweep of THz Radiator through Interferometer Setup

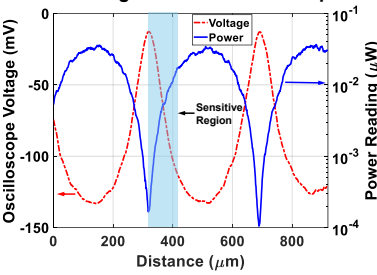

### Input Displacement & Output Power from 1.33 Hz "Heartbeat" Waveform

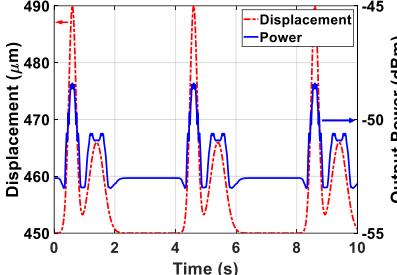


Fig. 3: (left) Behavior of measured power & voltage due to mirror displacement. (right) Time-domain power waveform of 1.33 Hz pulsed heartbeat signal recovered compared to input signal; the mirror to be vibrated was placed in the sensitive region.




Fig. 4: Workflow of Simulation Using Experimental Calibration Curve Data

## Material/Concentration Determination (Reflectometry)

### Power Output from THz Reflection of Different Substances

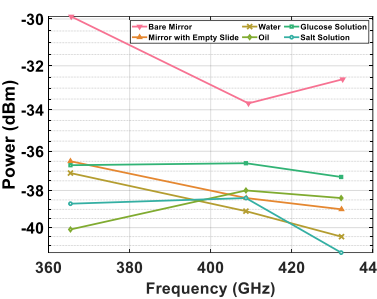


Fig. 5: Reflected power measurements from various substances measured at three frequencies. The system detects differences in power level allowing clear differentiation between some substances (especially at 432 GHz).

### Power Output from THz Reflection of Solutions of Varying Concentrations

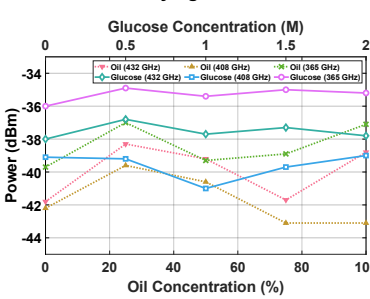


Fig. 6: Reflected power measurements for oil and glucose solutions. The system detects changes in oil concentration with a highly correlated pattern of peaks and troughs. For glucose, it identifies a unique absorption dip at 1M.

## Conclusions & Future Work

- Demonstrated viability of THz band for vibration sensing at micrometer scale
- Successfully isolated concentrations of 1M glucose in solution
- Data for consistent concentration detection was inconclusive but spectral footprints seem promising
- **Challenges:** Beam alignment required high precision, weak signal, phase noise of free-running systems
- **Suggestions:** increase chip power, use of coherent (phase-locked) sources
- **Future Work:** in vitro and in vivo testing of vibration sensing and biosample identification

## Acknowledgements

We would like to thank Professor Babakhani and the Integrated Sensors Laboratory for their support. Special thanks to Benyamin Fallahi Motlagh for his extensive guidance and mentorship. We also acknowledge the SURP team and NSF for making this research possible.

## References

- [1] S. Razavian, S. Thomas, M. Hosseini and A. Babakhani, "Micro-Doppler Detection and Vibration Sensing Using Silicon-Based THz Radiators," in IEEE Sensors Journal, vol. 22, no. 14, pp. 14091-14101, 15 July 2022, doi: 10.1109/JSEN.2022.3183002.